

1. change the language at Tiptel 72 system



Idle mode

Press key „P“ and ↓ to choose the menu point
Einstellungen

In the menu *Einstellungen* with the keys ↑, ↓, choose
Auslieferungszustand (**but not confirm it with RETURN!**).

Chosse the language with key ❶ or ❷
(1 = German, 2 = English)

Press the key ↵

Please note:

After this procedure the phone has the factory settings
and the extension number has to be assigned again (if
already done before the language change).